



BOS RS800 wireless transmitter





BOS RS800 wireless transmitter

Manual BOS RS800 wireless transmitter

The BOS RS800 is specially designed for the BOS HD820 wireless headphone. The transmitter has an external antenna which achieves a effective range of 50 meters. The basic design and straightforward controls are easy to use. The transmitter is equipped with a stereo line input on a RCA connector. The transmitter can communicate on one of the three channels equal to the BOS HD 820 wireless headphone.

Quick Start.

1. Connect the power adapter to the transmitter and the 230V power outlet.
2. When the power is connected the red LED indicator illuminates. However without an audio signal the transmitter will power off in 3 to 5 minutes.
3. Connect the audio source to the stereo RCA input. When there is no audio signal present the transmitter will power down after 3 to 5 minutes
4. Match the channel switch to the headphones.

Specifications.

Wireless Stereo transmitter UHF/RF system FM modulation.

Operating distance up to 50 meters

LED power/audio indicator.

Frequencies; 863.100Mhz, 863.800Mhz, 864.950Mhz.

Frequency response 30 – 20000 Hz.

Power supplied DC 12V 150mA.

Signal to noise ratio >75dB.

Channel separation >50dB.

Distortion <1%



BOS Audio & Light

**Nusterweg 63h
6136KT Sittard
The Netherlands**

**0031 (0) 46 410 6859
info@bosaudiolight.com**